

HDPE MJ ADAPTER N.T.S.

NOTES:

1. TRANSITIONS FROM HDPE PIPE TO VALVES SHALL BE MADE BY USE OF HDPE MJ ADAPTER.

APPROVED	REVISED
TRM CITY ENGINEER	
5-25-22	

HDPE MJ ADAPTER

STANDARD DETAIL

50-10